

TWELP 480 bps Vocoder

Unique high speech quality for such very low bit rate- better than MELPe on 600 bps.

For Digital HF Radio and other markets.

TWELP Technology Features. The vocoder is based on newest technology of speech coding called "Tri-Wave Excited Linear Prediction" (TWELP) that was developed by experts of DSPINI.


TWELP technology is a new class of vocoders that differs from any other LPC-based vocoders by:

- advance reliable method of pitch estimation
- pitch-synchronous analysis
- advance tri-wave model of excitation
- newest quantization schemes
- pitch-synchronous synthesis

Thanks to these unique features, TWELP technology provides much better speech quality in comparison with any well-known technologies, including AMBE+2, MELPe, ACELP, etc. on the same bit rate in range from 300 bps up to 9600 bps and more. Moreover, in contrast to other LBR vocoders (like MELPe, etc.) TWELP provides much better quality for non-speech signals like sirens, background music, etc.

Please visit: http://twelp.pro for details.

Superiority In Speech Quality. Here is the comparison with MELPe vocoder, operating on 600 bps. TWELP 480 bps vocoder and MELPe 600 bps vocoder were tested, using ITU-T P.50 speech base for 20 different languages. ITU-T P.862 utility was used for estimation of the speech quality in PESQ terms:

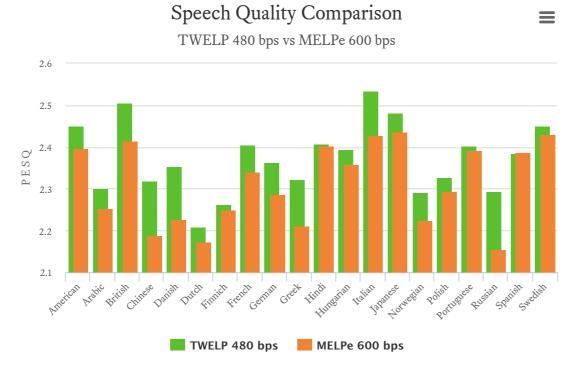

A diagram demonstrates superiority TWELP 480 over MELPe 600 in speech quality. Exact numbers are shown in the table below.

Language	TWELP 480 bps	MELPe 600 bps
American	2.451	2.397
Arabic	2.3	2.254
British	2.506	2.414
Chinese	2.319	2.189
Danish	2.355	2.227
Dutch	2.209	2.173
Finnich	2.264	2.249
French	2.405	2.34
German	2.364	2.287
Greek	2.323	2.212
Hindi	2.408	2.403
Hungarian	2.394	2.359
Italian	2.536	2.428
Japanese	2.482	2.436
Norwegian	2.292	2.225
Polish	2.328	2.294
Portuguese	2.404	2.393
Russian	2.294	2.156
Spanish	2.385	2.389
Swedish	2.45	2.43
Average	2.37345	2.31275

Superiority of the TWELP 480 is in average 0.061 PESQ

Speech Samples (WAV-files). A few independent experts listened TWELP 480 bps vocoder in comparison with MELPe 600 bps vocoder, using method of preferences. Majority of experts preferred TWELP to MELPe, having noted much more natural human-sounding of voice in the TWELP vocoder.

You can play and listen short samples of the source speech as well as the speech processed by both vocoders for any of 20 languages, using links in the table below.

Also, you can download full set of the P.50 samples as zip-files for all languages simultaneously, using the links in the "Downloads" para in a bottom of the page.

Language	Source speech	MELPe 600 bps	TWELP 480 bps
American	>	>	>
Arabic	•	>	>
British	•	>	>
Chinese	>	>	>
Danish	•	>	>
Dutch	•	>	>
Finnich	>	>	>
French	•	>	>
German	>	>	>
Greek	>	>	>
Hindi	•	>	>
Hungarian	•	>	>
Italian	>	>	>
Japanese	>	>	>
Norwegian	>	>	>
Polish	>	>	>
Portuguese	•	>	>
Russian	•	>	>
Spanish	>	>	>
Swedish	>	>	>

Superiority In Quality Of The Non-speech Signals. In contrast to other LBR vocoders (MELPe, AMBE+2, etc.), TWELP vocoders provide high quality of non-speech signals, including police, ambulance, fire sirens, etc. This feature in conjunction with high quality natural human-sounding of voice makes TWELP vocoders well suitable for replacement of analog radio by digital radio and also for other applications where high quality transmitting of non-speech signals is relevant along with high quality transmitting of speech signals.

Source type	Source signal	MELPe 600 bps	TWELP 480 bps
Siren only	>	>	•


High Robustness To Acoustic Noise. In contrast to other LBR vocoders, TWELP vocoders are well robust to acoustic noise thanks to robust reliable method of pitch estimation and other features of TWELP technology.

Moreover, vocoder includes in-built Noise Cancellation—Speech Enhancement (NCSE) functionality that improves speech quality in noisy acoustic environment.

NCSE Mode	Source signal	MELPe 600 bps	TWELP 480 bps
Disabled	>	>	>
Enabled	•	>	•

High Robustness To The Channel Errors. The diagram and table below show a dependence of the averaged speech quality for AWGN-noisy channel for different BER in comparison with other vocoders.

Special "robust" versions of the TWELP vocoders include FEC that are integrated with vocoder on base of "joint source-channel coding" approach that provides high speech quality simultaneously in noisy channel as well as in noiseless channel. FEC can operate with "soft decisions" as well as with "hard decisions" from a modem. "Soft decisions" mode provides much better robustness in comparison with the "hard decisions" mode.

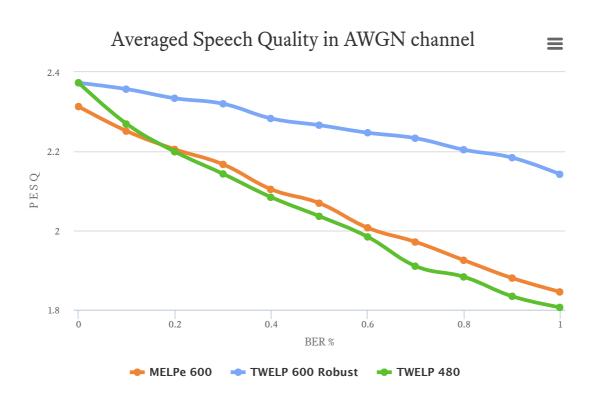

BER	MELPe	TWELP 600	TWELP
%	600	Robust	480
0.00	2.313	2.373	2.373

0.10	2.251	2.357	2.269
0.20	2.205	2.334	2.199
0.30	2.167	2.32	2.143
0.40	2.104	2.283	2.084
0.50	2.069	2.266	2.036
0.60	2.007	2.247	1.984
0.70	1.971	2.233	1.910
0.80	1.925	2.204	1.883
0.90	1.880	2.184	1.834
1.00	1.845	2.142	1.806

Additional Functionalities. The following additional functionalities are developed by DSPINI and integrated into TWELP vocoders:

- Automatic Gain Control (AGC),
- Noise Cancellation for Speech Enhancement (NCSE)
- Voice Activity Detector (VAD),
- Tone Detection/Generation (Single tones and Dual tones). The tones are transmitted by the vocoder facilities.

Each functionality has unique features, performance and characteristics, providing significant superiority over any well-known implementations on the market.

Technical Characteristics And Resource Requirements:

Technical characteristics

Bit Rate (bps)	Algorithm	Frame size (ms)	Algorithmic delay (including frame size) (ms)	Sampling rate (kHz)	Signal format	Bit stream format
480	TWELP	100	120	8	Linear 16-bit PCM	48

Additional functionalities

NT	F 4' 1'4	Technical characteristics			
Name	Functionality	Name	Value		
AGC	Automatic Gain Control	Control range:	0 +20 dB		
	Noise Canceller -	SNR increasing	> 6 dB		
NCSE	Speech Enhancer	Speech quality improvement	> 0.1 PESQ		
Tone Detector	Single/Dual tones detection	In accordance with international standards			
Tone Generator	Single/Dual tones generation	Special generator, kept continuity of signal (phase and amplitude of signal of previous frame)			
VAD	Voice Activity Detection	Reliable detection speech in background noise			
CNG	Comfort Noise	Type of noise	"white"		
CNG	Generation	Level	- 60 dB		

Resources for ARM Cortex-M4 platform

	MIPS* peak	Memory (KBytes)					
Module		Program	Data				
			Constants	Channel	Неар	Stack	
Voice Encoder	56.3	38	153	4.6	5.0	1.0	
NCSE	6.5						
AGC	0.2						
Voice Decoder	13.7						
Voice Encoder + Voice Decoder	70.0						
Total	76.7						

Resources for TI's C64 DSP platform

	MIPS* peak	Memory (KBytes)					
Module		Program	Data				
			Constants	Channel	Heap	Stack	
Voice Encoder	20.1	72	153	4.6	5.0	1.0	
NCSE	2.8						
AGC	0.1						
Voice Decoder	3.9						
Voice Encoder + Voice Decoder	24.0						
Total	26.9						

Resources (estimated) for TI's C55 DSP platform

	MIPS* peak	Memory (KBytes)					
Module		Program	Data				
			Constants	Channel	Heap	Stack	
Voice Encoder	34	23	153	4.6	5.0	1.0	
NCSE	6.7						
AGC	0.2						
Voice Decoder	10.0						
Voice Encoder + Voice Decoder	44						
Total	50.9						

^{*} DSPINI continues optimization of the TWELP algorithm and code in order to minimize computational complexity of the vocoder.

Guarantee And Support. DSPINI guarantees a quality and accordance of all technical characteristics of the product to requirement of current specifications. Testing and other method of quality control are used for guarantee support.

Any Platforms. DSPINI can port this vocoder software into any other DSP, RISC or general- purposes platform inshort time: 1-2 months.

Licensing Terms. To use the vocoder, customer should obtain a license from DSPINI only.

Adequate Price of the license is another advantage of this vocoder. Please contact us to find out.

Customization. The vocoder can be customized under any specific requirements- other bit rate, frame size, any other robustness to channel errors, etc. Please contact with us for details.

Prospects. DSPINI is impoving and developing continuously a set of new vocoders with range from 300 bps up to 9600 bps, based on TWELP technology.

Related Software. This vocoder may be effectively used in a bundle with other DSPINI's products:

- Linear and acoustic echo cancellers,
- Multichannel noise cancellers (including two-microphone adaptive array),
- Wired or radiomodems for any types of channels and bitrates,
- Other products.

Downloads:

- Datasheet (pdf)
- ITU-T P.50 source speech samples (zip)
- MELPe 600 bps speech samples (zip)
- TWELP 480 bps speech samples (zip)
- PC-evaluation package (zip) on request
- User's Guide document (pdf) on request

Please contact us by e-mail:

request@dspini.com

or by phone:

+44 20 81 33 00 44

+33 9 70 40 33 99

Tri-Wave Excited Linear Prediction, TWELP, DSPINI and DSP Innovations logo are trademarks of DSP Innovations. © 2007–2018 DSP Innovations. All rights reserved.